



Step 1. Remove this bolt from the base pivot and remove shaft.

Step 2. Press the base pivot with the spacer and rubber nut into the hole in the top of your steering stem nut until the base firmly touches the stem nut.

STEP 3. Align the slot in the base to allow front to rear movement of the shaft. Now tighten the flat head bolt inside the base until the base can no longer be moved.

Step 4. Re-install the shaft and bolt from Step 1.

Check that all fasteners are tight and install the supplied Velcro onto your device. That's it!

Note: Part# 40001/40005 Use Standard Top Plate ONLY!

