


Delphi XM SkyFi2 Installation Help

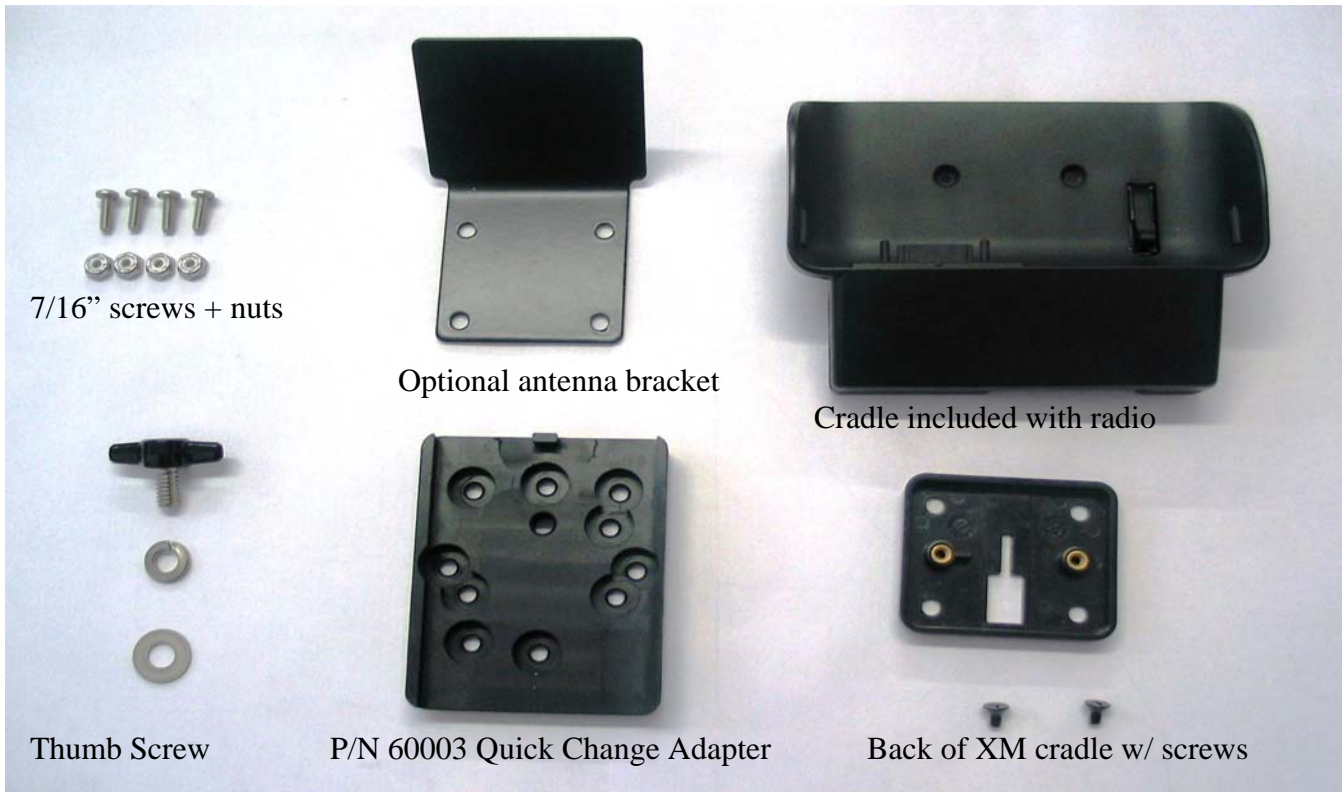

To mount an XM SkyFi2 onto any TechMount system. First remove the back cover from the power cradle that came with your XM radio. (save the two small screws) and attach the back cover to the Quick Change Adapter P/N 60003 using the 7/16" screws included with the Quick Change Adapter. Install thru the back cover and into the top of the Quick Change Adapter by aligning the corresponding holes and place the (4) nylock nuts onto the underside of the adapter and tighten. Note: if installing the optional antenna bracket, place it between the back cover and the Quick Change Adapter. Now re- install the back cover onto the radio cradle.

Now that the cradle is installed onto the Quick Change Adapter simply slide the adapter onto any TechMount standard top plate and secure with the thumb screw included with the adapter.